


Recommended Manual Drain Hookup

Filter/Separator Vessels

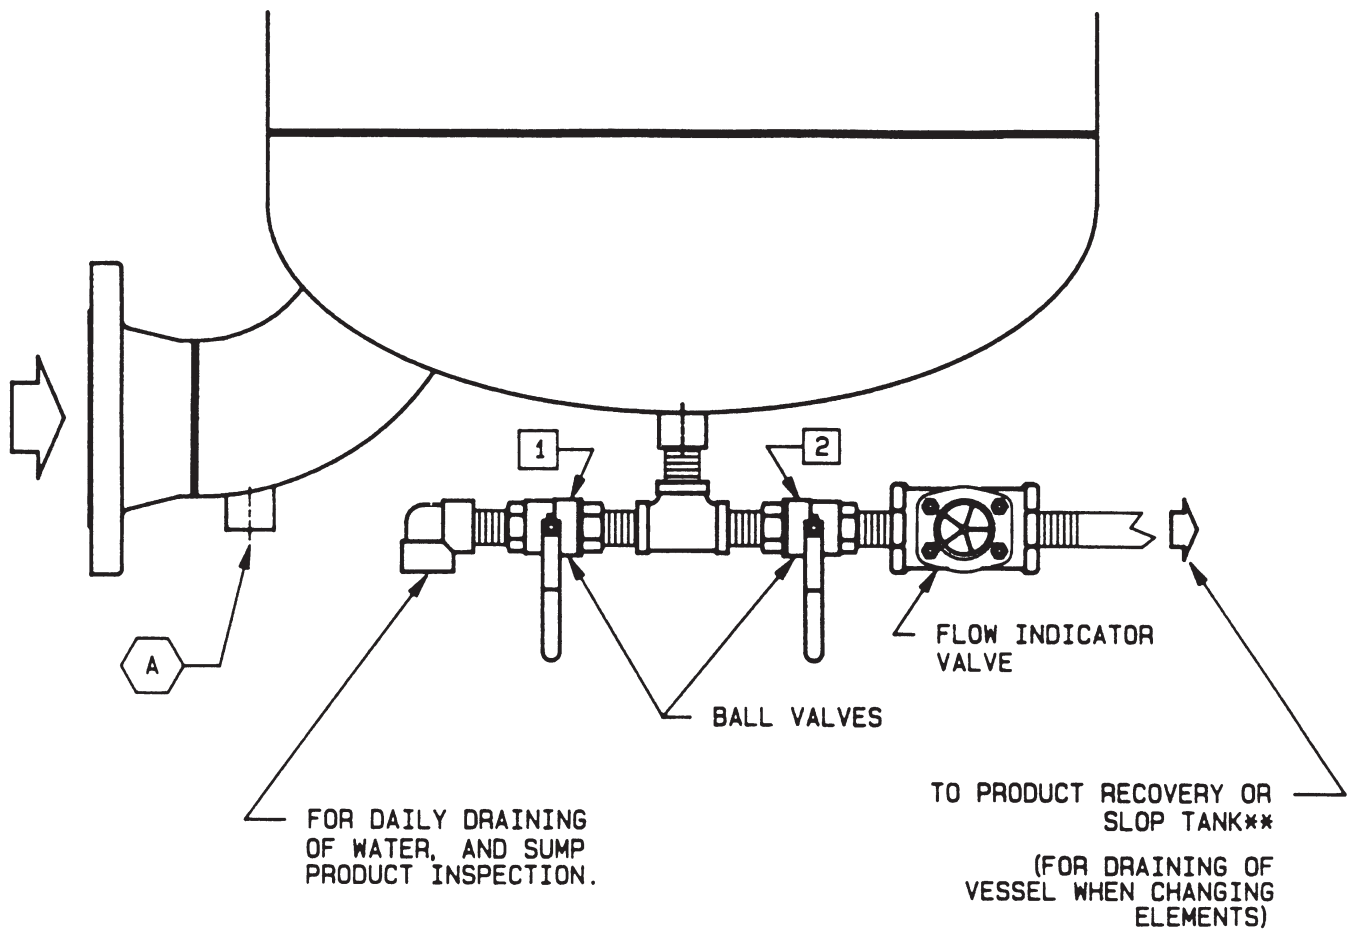

** WHEN DRAINING VESSEL TO CHANGE CARTRIDGES:

1. Drain vessel completely through ball valve #2 above.
2. Drain a few gallons out of manual drain valve "A" (or plug) located at the bottom of the inlet elbow. This insures no fuel remains trapped inside coalescers. (Otherwise unfiltered fuel from inside the coalescers could make clean-up of the sump more tedious.)

NOTE:

A flow indicator valve (not provided by Velcon) is recommended so that operator will remember to close valve #2 when filling the vessel. It also shows operator when the vessel is completely drained.



Velcon products are sold and serviced by a world-wide representative network. To order, contact Headquarters or your **LOCAL REPRESENTATIVE:**

COMPANY HEADQUARTERS:
Velcon Filters, Inc.

1210 Garden of the Gods Road
Colorado Springs, CO 80907-3410
Phone: 1.800.531.0180 / 1.719.531.5855
Fax: 719.531.5690
e-mail: vfsales@velcon.com
www.velcon.com

MANUFACTURING PLANTS LOCATED AT:

Colorado Springs, Colorado
Sylacauga, Alabama
Henryetta, Oklahoma

OVERSEAS AFFILIATES:

Frankfurt/M., Germany & Singapore

***Liquid Filtration
and Separation
Specialists***